



X-TYPE

OWNER'S HANDBOOK

Publication Part No. **JJM 10 02 20 901**

This handbook forms part of the Owner literature supplied with your new vehicle. Left-hand drive and right-hand drive conditions may be shown in the graphics and where information is specific to a particular country, it is indicated as such.

The **Quick start** is designed to rapidly familiarise the driver with the initial set up and also explain some of the unique features. Please take the time to study the operating instructions with your vehicle as soon as you can.

Important

The information contained in this handbook covers all vehicle derivatives and optional equipment. Some of the options may not be fitted to your vehicle unless they formed part of the original vehicle specification. Therefore some parts of this handbook may not apply to your vehicle. Furthermore, due to printing cycles, it may include descriptions of options before they become generally available.

The options, hardware and software in your vehicle are from the available specifications for the market in which the vehicle was intended for sale. If your vehicle is to be used in another geographical area you may have to modify the vehicle specification to suit local conditions. Jaguar Cars Limited is not responsible for the cost of any modifications.

The information contained in this publication was correct when it went to print. Vehicle design changes may have been made after this handbook was printed. When this occurs a handbook supplement is added to the literature pack. Subsequent updates can be viewed on the Jaguar Internet site at; www.ownerinfo.jaguar.com.

In the interest of development, the right is reserved to change specifications, design or equipment at any time without notice and without incurring any obligations. This publication, or part thereof, may not be reproduced nor translated without our approval. Errors and omissions excepted.

©Jaguar Cars Limited

All rights reserved.

Published by Jaguar Technical Communications.

Contents

General Information

INTRODUCTION	9
WARNINGS, CAUTIONS AND NOTES	9
JAGUAR DEALERS/ AUTHORISED REPAIRERS... 10	
FLOOR MAT RETENTION	11
WINDOW TINTING	11
PROTECT THE ENVIRONMENT	12
MOBILE/PORTABLE TELEPHONES	12
LEATHER CARE GUIDE	13
VEHICLE HANDBOOKS	14
REGULAR SERVICING	14
DATA RECORDING	15
DISABILITY MODIFICATIONS	16
RUNNING-IN	16
VEHICLE IDENTIFICATION NUMBER (VIN)	17
CERTIFICATION LABEL	18
ENGINE NUMBER	18
TRANSMISSION NUMBER	19

Health and Safety

HEALTH AND SAFETY PRECAUTIONS	20
-------------------------------------	----

Starter Switch

STARTER SWITCH OPERATION	22
TO REMOVE THE STARTER KEY	22
GEARSHIFT INTERLOCK	23
STEERING COLUMN LOCK	23

Vehicle Security

SECURITY OVERVIEW	24
IMMOBILISER SECURITY LAMP	24
KEYS	25
KEY TRANSMITTER	25
RADIO FREQUENCY APPROVAL	27
TRANSMITTER BATTERY RENEWAL	27

Door Locks

OPERATION	29
SMART LOCKING	29
LOCKING AND UNLOCKING	30
CHILD SAFETY LOCKS	33

Luggage Compartment Locks

LUGGAGE COMPARTMENT	34
---------------------------	----

Alarm Systems

AUDIBLE SIGNALS	35
ERROR SIGNAL	35
FULL ALARM	36
SECURITY FEATURES	36

Occupant Protection

SEAT BELTS	38
BELT MINDER (Japan only)	40
SEAT BELT FITTING	40
USING SEAT BELTS DURING PREGNANCY	41
AIRBAGS	42
OCCUPANT SENSING	46
AIRBAG WARNING LAMP	47
AIRBAG LABELS	47
AIRBAG SERVICE INFORMATION	48

Child Safety

CHILD AND INFANT SAFETY	49
SECURING CHILD RESTRAINTS	52
SAFE USE OF CHILD RESTRAINTS	53
ISOFIX CHILD RESTRAINTS	54
CHILD SEAT ANCHOR POINTS	55
FITTING THE ISOFIX SEAT	57
ISOFIX CHECK LIST	58
REMOVING ISOFIX SEATS	59

Seats

SITTING IN THE CORRECT POSITION	60
HEAD RESTRAINTS	61
FRONT SEAT CONTROLS	62
DRIVER'S SEAT ADJUSTMENT (WITH MEMORY) 63	
FRONT SEAT HEATERS	65

Clock

CLOCK ADJUSTMENT	66
------------------------	----

Steering Column

COLUMN RELEASE LEVER	67
----------------------------	----

Door Windows

WINDOW SWITCHES	68
ELECTRIC WINDOW OPERATION	68
WINDOW ANTI-TRAP FEATURE	69

Contents

Mirrors

DOOR REAR-VIEW MIRRORS	71
INTERIOR REAR-VIEW MIRROR	72

Luggage Compartment

LOADING THE VEHICLE.....	73
LUGGAGE TIE-DOWN LOOPS - SALOON.....	73
LUGGAGE TIE-DOWN LOOPS - ESTATE.....	74
REAR SEAT BACK FOLD DOWN	75
ESTATE LUGGAGE COVER	76

Instruments

INSTRUMENT PACK.....	78
SPEEDOMETER	78
TACHOMETER	79
FUEL LEVEL GAUGE	79
ODOMETER	80
ENGINE TEMPERATURE.....	80

Warning Indicators

GENERAL DESCRIPTION	81
---------------------------	----

Audible Warnings

WARNING SOUNDS	85
----------------------	----

Message Centre

MESSAGE CENTRE LOCATION	86
MESSAGES.....	86

Trip Computer

TRIP COMPUTER FUNCTIONS	89
TRIP COMPUTER SWITCHPACK	90
CLEARING MESSAGES.....	91

Cruise (Speed) Control

CRUISE CONTROL SWITCHES	92
-------------------------------	----

Exterior Lighting

EXTERIOR LIGHTING SWITCH.....	94
HEADLAMP LEVELLING	96
TOURING HEADLAMP ADJUSTMENT	97
HAZARD WARNING	97
DIRECTION INDICATORS	98

Interior Lighting

READING/MAP LIGHTING	99
ILLUMINATED ENTRY/EXIT.....	99

REAR ROOF LIGHTING.....	100
BATTERY SAVER.....	100
DIMMER SWITCH	101

Parking Assist

PARKING ASSIST SYSTEM.....	102
----------------------------	-----

Horn

HORN LOCATION	105
---------------------	-----

Sunroof

SUNROOF OPERATION	106
SUNSHADE OPERATION	107

Wipers and Washers

WINDSCREEN WIPERS.....	108
WINDSCREEN WASH/WIPE	109
HEADLAMP POWERWASH	109
ESTATE REAR WASH/WIPE	110

Parkbrake

TO APPLY THE PARKBRAKE.....	111
TO RELEASE THE PARKBRAKE.....	111

Interior Features

SLIDING ARMREST.....	112
CUPHOLDERS	113
GLOVE COMPARTMENT	114
CIGAR LIGHTER AND ASHTRAY	114
SUN VISORS AND VANITY MIRRORS	115
REAR CENTRE ARMREST	116

Engine Starting

BEFORE STARTING	117
STARTING A PETROL ENGINE	117
STARTING A DIESEL ENGINE	118

Transmission

AUTOMATIC TRANSMISSION (DIESEL).....	120
AUTOMATIC TRANSMISSION (PETROL)	122
MANUAL TRANSMISSION	125

Braking System

ANTI-LOCK BRAKING SYSTEM (ABS).....	126
EMERGENCY BRAKE ASSIST.....	127

Contents

Stability Control

DYNAMIC STABILITY CONTROL (DSC)	128
---------------------------------------	-----

Driving Information

BEFORE DEPARTING	129
WARMING UP	129
ENGINE BRAKING	130
HEADLAMPS IN DAYLIGHT	130
PARKING THE VEHICLE	131
ENGINE OIL CONSUMPTION	131
WINTER DRIVING	132
TOURING	132
TOWING A CARAVAN OR TRAILER	134
TOWBAR FIXING POINTS - SALOON	135
TOWBAR FIXING POINTS - ESTATE	135

Fuel and Refuelling

SAFETY PRECAUTIONS	136
FUEL TANK FILLING	136
FUEL CAPACITY	137
FUEL REQUIREMENTS - PETROL ENGINES ..	138
FUEL REQUIREMENTS - DIESEL ENGINES...	139
DIESEL PARTICULATE FILTER (DPF)	140
RUNNING OUT OF FUEL	141
CATALYTIC CONVERTERS AND DIESEL PARTICULATE FILTERS	142

Climate Control

INTRODUCTION	143
RECOMMENDED OPERATION	143
GENERAL POINTS	144
AUXILIARY HEATER (DIESEL ONLY)	145
PANEL ILLUMINATION	145
AIR DISTRIBUTION	146

Automatic Climate Control

AUTOMATIC CONTROL PANEL	147
TO SWITCH THE SYSTEM ON	148
AUTO MODE	148
TEMPERATURE SELECTION	149
EXTERNAL TEMPERATURE	149
CELSIUS/FAHRENHEIT SELECTION	150
AIR RECIRCULATION	150
WINDSCREEN DEFROST/DEMIST	151
HEATED SCREENS AND DOOR MIRRORS ...	151
AIR CONDITIONING	152
BLOWER SPEED	152

MANUAL AIR DISTRIBUTION	153
TO SWITCH THE SYSTEM OFF	153
RAM AIR	154

Touch-screen Climate Control

INFORMATION	155
CONTROLS	156
Starter Switch ON	157
CLIMATE CONTROLS DISPLAY	157
AUTO MODE	158
TEMPERATURE SELECTION	159
DUAL TEMPERATURE ZONES	159
EXTERNAL TEMPERATURE	160
CELSIUS/FAHRENHEIT SELECTION	160
TIMED AIR RECIRCULATION	161
LATCHED AIR RECIRCULATION	161
WINDSCREEN DEFROST/DEMIST	162
HEATED SCREENS AND DOOR MIRRORS ...	162
AIR CONDITIONING	163
BLOWER SPEED	163
BLOWER MUTE	164
MANUAL AIR DISTRIBUTION	164
SWITCHING CLIMATE CONTROL OFF	165
RAM AIR	165
CLIMATE OPTIONS	166
SMOG SENSING	166

Inertia Switch

RESETTING THE INERTIA SWITCH	167
------------------------------------	-----

Emergency Starting

ROLLING START	168
JUMP LEADS	168
EMERGENCY START PROCEDURE	170

Wheel Changing

SPARE WHEEL LOCATION	171
TEMPORARY-USE SPARE WHEEL	172
LOCKING WHEEL NUTS	173
CHANGING A WHEEL	174

Vehicle Recovery

VEHICLE FAILURE	177
RECOMMENDED RECOVERY METHODS	177
TRANSPORTING	178
TOWING EYES	179

Contents

Bulb Renewal

OVERVIEW	181
HIGH BEAM (INNER) HEADLAMP	181
DIP BEAM (OUTER) HEADLAMP	182
SIDE REPEATER INDICATOR.....	182
FRONT PARKING (SIDE) LAMP	183
FRONT DIRECTION INDICATOR	183
NUMBER PLATE LAMP	184
FRONT FOG LAMP	184
REAR LAMP ASSEMBLY - SALOON	185
REAR LAMP ASSEMBLY - ESTATE	185
HIGH MOUNTED STOP LAMP	186

Fuses

FUSE TYPES	187
REPLACING A FUSE	187
FUSE BOX LOCATIONS.....	188
FUSE POSITIONS	190
ENGINE COMPARTMENT FUSES (1)	190
PASSENGER COMPARTMENT FUSES (2)	193

Fire Extinguisher

DEALER FITTED FIRE EXTINGUISHER	195
FACTORY FITTED FIRE EXTINGUISHER	195
MAINTENANCE.....	196

General Maintenance

INTRODUCTION.....	197
REGULAR SERVICING	197
PROTECT THE ENVIRONMENT.....	198

Bonnet Release

OPENING THE BONNET	199
CLOSING THE BONNET	200

Regular Checks

CHECK INTERVALS	201
ENGINE OIL CONSUMPTION	202
DIPSTICK AND RESERVOIR LOCATIONS	203

Checking and Top-up

ENGINE OIL LEVEL.....	204
RECOMMENDED ENGINE OIL	205
USED ENGINE OIL	205
POWER STEERING FLUID LEVEL	206
BRAKE/CLUTCH FLUID RESERVOIR	207
WINDSCREEN WASHER RESERVOIR	208

COOLANT LEVEL.....	209
ENGINE ANTIFREEZE	210

Battery

BATTERY WARNING SYMBOLS.....	212
BATTERY CARE.....	212
ALTERNATOR.....	214
BATTERY CHARGING.....	214

Wiper Blades

CLEANING THE WINDSCREEN.....	216
WIPER BLADE CLEANING	216
WIPER BLADE RENEWAL	217
WINDSCREEN WASHERS	217

Tyres

TYRE SPECIFICATIONS.....	218
TYRE RENEWAL.....	218
TYRE PRESSURES.....	219
WINTER (SNOW) TYRES	222
SNOW CHAINS.....	223

Vehicle Care

INTERIOR CARE.....	224
EXTERIOR CARE	225
CARE OF ALLOY ROAD WHEELS	226

Electrical Accessories

USE OF ACCESSORIES.....	227
-------------------------	-----

Engine Data

ENGINE CONFIGURATION.....	228
---------------------------	-----

Weights

2.0 LITRE PETROL SALOON	229
2.0 LITRE PETROL ESTATE.....	230
2.0 LITRE DIESEL SALOON.....	231
2.2 LITRE DIESEL SALOON.....	232
2.0 LITRE DIESEL ESTATE.....	233
2.2 LITRE DIESEL ESTATE.....	234
2.5 AND 3.0 LITRE PETROL SALOON	235
2.5 AND 3.0 LITRE PETROL ESTATE.....	236

Load Weights

ALL VEHICLES	237
--------------------	-----

Contents

Dimensions

ALL VEHICLES	238
--------------------	-----

Wheels and Tyres

RECOMMENDED TYRE FITTING	239
R PERFORMANCE WHEELS.....	240

Fuel Consumption

UK MARKET ONLY.....	241
---------------------	-----

Touch-screen

GENERAL INFORMATION	242
SCREEN CLEANING	242
AUTOMATIC CLIMATE CONTROL	243
AUDIO SYSTEMS.....	243
IN-CAR TELEPHONE	244
JAGUARVOICE.....	245

Touch-screen Display

TOUCH-SCREEN USE AND CARE.....	246
MENU	247
VOLUME PRESET	247
BRIGHTNESS/CONTRAST	248
SYSTEM SETUP.....	248

Audio System

GENERAL INFORMATION	250
SECURITY CODE NUMBER	250
COPYRIGHT LAWS.....	251
AUDIO SYSTEM CARE	251

Steering Wheel Controls

STEERING WHEEL CONTROLS.....	252
------------------------------	-----

Radio

GENERAL INFORMATION	253
RADIO - STANDARD AUDIO	257
RADIO WITH TOUCH-SCREEN.....	261

Digital audio broadcasting (DAB)

GENERAL INFORMATION	266
---------------------------	-----

DAB Touch-screen

AUDIO CONTROLS.....	268
CHANNEL INFORMATION	269
CHANNEL AUTOMATIC TUNING	270
CHANNEL OPTIONS.....	270

DAB SEARCH.....	272
PRESET BUTTONS	273
SETTINGS.....	274

DAB Standard audio

AUDIO CONTROLS	276
SELECTING DAB.....	277
CHANNEL AUTOMATIC TUNING.....	277
ENSEMBLES.....	278
CHANNEL OPTIONS	278
PRESET BUTTONS	279
DAB COUNTRY	280
PTY.....	281

Single CD Player

SINGLE CD PLAYER - STANDARD AUDIO....	282
SINGLE CD PLAYER WITH TOUCH-SCREEN	283

Compact Disc Changer

COMPACT DISC (CD) CHANGER OPERATION....	285
CD CHANGER - STANDARD AUDIO.....	286
CD CHANGER WITH TOUCH-SCREEN	287

Telephone Introduction

INTRODUCTION.....	289
SYSTEM OVERVIEW.....	289
VOICE ACTIVATION	290
SAFETY.....	291

Telephone System

STEERING WHEEL CONTROLS	293
PAIRING YOUR PHONE	293
RECONNECTING A PHONE	295
PAIRING STRATEGY.....	296
CONNECTION STRATEGY.....	296
SILENT MODE	297

Telephone Operation - Standard

AUDIO PANEL OVERVIEW.....	298
RECEIVING A CALL	300
REJECTING A CALL.....	300
MAKING A CALL	301
MEMORY RECALL DIALLING	302
LAST NUMBER REDIAL.....	302

Contents

Telephone Operation - Touch-screen

OVERVIEW	303
MAKING A CALL	303
RECEIVING A CALL	304
END CALL FUNCTION	304
OTHER FUNCTIONS	305
ADDITIONAL INFORMATION	306

Phone Book

PHONE BOOK TRANSFERS	307
----------------------------	-----

Declaration of Conformity

EUROPEAN UNION DIRECTIVES CONFORMANCE STATEMENT	309
EXPORT CONTROLS	309
FCC/INDUSTRY CANADA NOTICE	310

JaguarVoice

INTRODUCTION	311
USING THE SYSTEM	312
HOW TO SAY NUMBERS	317
VOICE COMMAND LIST	318
VOICE TRAINING	322
TRAINING COMMAND LIST	323
TROUBLESHOOTING ERROR MESSAGES	324

General Information

INTRODUCTION

Whether you are new to the Jaguar marque or have previously owned Jaguar or Daimler vehicles, we are pleased that you have made Jaguar your choice of vehicle this time.

When left-hand or right-hand is used in the text, this refers to the left-hand side or right-hand side of the vehicle, viewed from the rear.

For safety and the pleasure you will get from your new vehicle, please take the time to get well acquainted with your vehicle by reading the handbooks.

This Handbook describes every option and model variant available and therefore some of the items covered may not apply to your particular vehicle.

Note: Remember to pass on the vehicle handbooks when reselling the vehicle. Handbooks are integral parts of the vehicle.

WARNINGS, CAUTIONS AND NOTES

Take particular note of WARNINGS, Cautions and Notes given throughout this handbook.



WARNING:

Safety warnings are included in this handbook. These indicate either a procedure which must be followed precisely, or information that should be considered with great care in order to avoid the possibility of personal injury.

Caution: Cautions are included in this handbook. These indicate either a procedure which must be followed precisely, or information that should be considered with great care in order to avoid the possibility of damage to your vehicle.

Note: A note is a procedure which will help avoid difficulties in the operation of the vehicle.

Warning symbols on the vehicle



JOL2756

On encountering the warning triangle or open book symbol on the vehicle, it is important that before touching this part of the vehicle or attempting adjustments of any kind you consult the relevant section of this handbook.

Caution: Do not remove any warning labels from the underbonnet area or from inside the vehicle.

General Information

JAGUAR DEALERS/ AUTHORISED REPAIRERS

Jaguar Dealers/Authorised Repairers are chosen with care. Each is dedicated to providing a Sales, Service and Spare Parts facility of the highest standard.

Jaguar Dealers/Authorised Repairers are provided with full technical support from the factory, with comprehensive training for all their technicians. Dealers' workshops operate to a high standard and have all the necessary tools and equipment essential to maintain or repair Jaguar vehicles.

Genuine Jaguar parts and accessories

Your Jaguar Dealer/Authorised Repairer can supply you with genuine replacement parts and accessories which are fully approved to Jaguar's original equipment specification. This will ensure that the safety and performance of your vehicle is maintained for your complete peace of mind.

Please note that fitment of non-genuine parts may invalidate the vehicle warranty if a subsequent fault occurs due to fitting sub-standard replacement parts or accessories.

Jaguar parts distribution service

Jaguar Dealers/Authorised Repairers stock a large number of parts to keep your vehicle maintained and get you back on the road as quickly as possible. Their service is supported by six strategically positioned Jaguar parts distribution centres in the United Kingdom, Germany, Japan, Australia and two in North America, providing next-day delivery to the vast majority of worldwide Dealers.


Accessories

A full range of Jaguar Engineering approved accessories including safety, stowage, touring, leisure and lifestyle products is available from your Jaguar Dealer/Authorised Repairer.

Please ask your Jaguar Dealer/Authorised Repairer for an up-to-date brochure so you can select your requirements from the latest range.

General Information

FLOOR MAT RETENTION

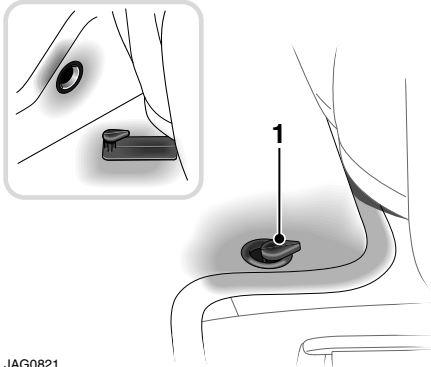

JAG0821

Ensure that the driver's floor mat is correctly positioned and secured under the tongues on the retention posts (**1**, only one post shown), so that the mat does not interfere with the operation of the accelerator, clutch or brake pedals.

In particular, check the position of the mat when refitting after cleaning or servicing.

WINDOW TINTING

Metal tinting must never be applied to windows that contain antenna patterns as radio reception will be degraded.

A non-metallic tinting should be used if you require window tinting and if in doubt, contact your Jaguar Dealer/Authorised Repairer for advice.

General Information

PROTECT THE ENVIRONMENT

We must all play our part in protecting the environment. Correct vehicle usage and disposal of waste cleaning and lubrication materials are significant steps towards this aim.

Avoid using high engine speeds. You will then protect your engine, reduce fuel consumption, lower the engine noise level and help towards reducing the environmental burden.

Dispose of batteries, tyres, engine, brake and coolant fluids at your local authorised waste disposal facilities.

MOBILE/PORTABLE TELEPHONES

Check the laws and regulations on the use of cellular telephones in the areas where you drive. Always obey them. Also, give full attention to driving.

Use hands-free operation (if fitted) and pull off the road and park before making or answering a call, if driving conditions so require.

General Information

LEATHER CARE GUIDE

Leather is a natural product, therefore, it bears natural characteristics, such as grain variations, growth and brush marks. These non-weakening marks show the true nature of the hide and are the hallmarks of a leather product. Leather is an easy to maintain natural product, however, dust and substances can penetrate the pores and crease the leather, causing surface wear and brittleness.

To prevent ingrained dirt and staining, inspect the seat upholstery regularly and clean every one to two months as follows:

- Wipe off fine dust from the seat surfaces at regular intervals using a clean, damp, non-coloured cloth. Change frequently to a clean area of cloth to avoid abrasive action on the leather surface. Avoid over-wetting.
- If this is not sufficient, use a cloth which has been dampened with warm soapy water and then wrung out. Never allow the leather to be soaked through. Use only mild non-caustic soap.
- Use Jaguar Leather Cleaner for heavily soiled areas. Dry off and rub with a clean soft cloth, changing surfaces regularly.

When staining (e.g., from clothing) or spillage occurs, clean the affected area immediately as described above.

It is recommended that Jaguar Leather Cleaner is used several times a year to maintain its appearance and suppleness. The Jaguar Leather Cleaner will nourish and moisturise the leather and help to improve and renew the surface protective film against dust and substances.

- Do not use solvents such as petrol, white spirit or alcohol. Do not use detergents, furniture polish or household cleaners. Such strong treatments may give, initially, an impressive appearance, but their use will lead to rapid damage or deterioration of the natural properties of the leather. Jaguar recommends a basic set of products that have been specially selected for the type of leather in your vehicle. The Manufacturer's Warranty will be invalidated if treatments are used other than those recommended by Jaguar Cars Limited.
- Dark clothing may stain leather seats just like other upholstery products.
- Sharp objects such as belts, zip fasteners, rivets, etc. can leave permanent scratches and scratch marks on the leather surface.
- Unless spillages such as tea, coffee or ink are washed away immediately, permanent staining may have to be accepted.

If a valet service is used, ensure that the specialist concerned is aware of these instructions, and follows each instruction precisely.

For any further questions please consult your Jaguar Dealer/Authorised Repairer for specialist advice.

General Information

VEHICLE HANDBOOKS

Remember to pass on the vehicle handbooks when reselling the vehicle. Handbooks are integral parts of the vehicle.

REGULAR SERVICING

Maintenance

Each vehicle is given a full Pre-Delivery Inspection to ensure that all systems function correctly and that the vehicle meets its specification.

Owners are responsible for the regular maintenance and servicing of the vehicle. Jaguar Dealer/Authorised Repairers will be pleased to arrange periodic servicing and can provide you with details of tasks carried out at each service interval.

Failure to implement maintenance at the recommended intervals could result in deterioration of vehicle performance and possible infringement of regulations.

Regular routine maintenance not only helps to prevent unnecessary breakdowns and inconvenience, but enhances the trade in or resale value of the vehicle.

Jaguar diagnostic system

Many of the vehicle systems are controlled by complex electronic devices. Specialist equipment is required to trace and rectify faults in the systems and ensure that only faulty components are repaired or renewed.

Caution: Severe damage to the electrical system and electronic components can occur if any attempt is made to diagnose faults in the electrical system using conventional diagnostic equipment (for example, the use of test lamps or low impedance voltmeters). The fitting of any electrical accessory should only be entrusted to a Jaguar Dealer/Authorised Repairer.

General Information

DATA RECORDING

Service Data Recording

Service data recorders in your vehicle are capable of collecting and storing diagnostic information about your vehicle. This potentially includes information about the performance or status of various systems and modules in the vehicle, such as engine, throttle, steering or brake systems.

In order to properly diagnose and service your vehicle, Jaguar Cars Limited and service and repair facilities may access vehicle diagnostic information through a direct connection to your vehicle.

Event data recording

This vehicle is equipped with an Event Data Recorder (EDR). The main purpose of an EDR is to record, in certain crash or near-crash situations, such as an air bag deployment or hitting a road obstacle, data that will assist in understanding how a vehicle's systems performed. The EDR is designed to record data related to vehicle dynamics and safety systems for a short period of time, typically 30 seconds or less. The EDR in this vehicle is designed to record such data as:

- How various systems in your vehicle were operating;
- Whether or not the driver and passenger safety belts were buckled/fastened;
- How far (if at all) the driver was depressing the accelerator and/or brake pedal; and,
- How fast the vehicle was travelling.

Data can help provide a better understanding of the circumstances in which crashes and injuries occur.

***Note:** EDR data are recorded by your vehicle only if a non-trivial crash situation occurs; no data are recorded by the EDR under normal driving conditions and no personal data (e.g., name, gender, age, and crash location) are recorded. However, other parties, such as law enforcement, could combine the EDR data with the type of personally identifying data routinely acquired during a crash investigation.*

To read data recorded by an EDR, special equipment is required, and access to the vehicle or the EDR is needed. In addition to the vehicle manufacturer, other parties, such as law enforcement, that have the special equipment, can read the information if they have access to the vehicle or the EDR.

Jaguar Cars Limited do not access EDR information without obtaining consent, unless pursuant to court order or where required by law enforcement, other government authorities or third parties acting with lawful authority.

Other parties may seek to access the information independently of Jaguar Cars Ltd.

General Information

DISABILITY MODIFICATIONS

Occupants with disabilities which may require modification of the vehicle must contact a Jaguar Dealer/Authorised Repairer before any modifications are made.

RUNNING-IN

Apart from a few precautionary recommendations, there are no strict running-in procedures for this vehicle.

By observing the following advisory notes you will ensure maximum engine, transmission and brake life for your vehicle:

- Allow the engine to warm up thoroughly before operating at engine speeds over 3 500 rev/min.
- Vary the speed frequently.
- From 940 miles (1 500 kilometres) onwards, gradually increase performance of the vehicle up to the permitted maximum speed.

Running-in for brakes

To ensure that the brake pads can bed-in evenly and reach their optimum wear and performance condition, usually within 300 miles (480 kilometres), the following points are recommended.

- Where possible, avoid heavy braking or rough usage of the brakes as this can result in damage being caused to the brake pads and discs.
- Avoid prolonged use of the brakes, for example, when descending severe gradients.
- Frequent light application of the brakes is desirable. This helps to fully bed-in the brake pads before the normal running-in period is completed and the vehicle is operated at high speeds, when maximum brake efficiency will be required.

The above equally applies when new discs or pads have been fitted.

General Information

Running-in for automatic transmission

To allow the automatic transmission to uniquely adapt to the vehicle, the transmission should be operated in normal mode (i.e. Sport mode switch not illuminated) for the first 800 km (500 miles).

VEHICLE IDENTIFICATION NUMBER (VIN)

It is essential that the Vehicle Identification Number (VIN) is quoted in all correspondence and when ordering replacement parts.

The number is visible from outside the vehicle, on a plate in the lower left edge of the windscreen.

Vehicle build date (Australia only)

This is the calendar month and year in which the body and powertrain assemblies were cojoined and the vehicle was driven from the production line. The build date is shown on a plate located inside the spare wheel well, on the left-hand vertical surface.

General Information

CERTIFICATION LABEL

Vehicles have the Certification Label adhered to the left-hand rear door hinge post. Vehicle weights, paint code, manufacture date and the VIN are shown on this plate.

ENGINE NUMBER

Petrol engines

Stamped on a raised/machined boss above the oil pan seam directly behind the oil filter adapter plate.

Diesel engines:

Stamped on a raised/machined boss on the left-hand side of the engine bay, directly above the air conditioning pump pulley.

General Information

TRANSMISSION NUMBER

On a metal label or bar code label attached to the transmission casing.

Health and Safety

HEALTH AND SAFETY PRECAUTIONS



WARNING:

Many liquids and other substances used in vehicles are poisonous and should never be consumed and must be kept away from open wounds. These substances include antifreeze, brake fluid, fuel, windscreen washer additives, lubricants and various adhesives.



WARNING:

The presence of any unusual fumes (for example; petrol, diesel or exhaust fumes) in the passenger compartment and/or luggage compartment should be corrected immediately by a Jaguar Dealer/Authorised Repairer.



WARNING:

If you must drive under these conditions do so only with all windows fully open.



WARNING:

By operating other electronic equipment (for example; a mobile phone without an exterior antenna) electro-magnetic fields can cause malfunctions of the vehicle electronics. Therefore, you should observe the instructions of the equipment manufacturers.



WARNING:

Any modifications to the fuel system not specifically designed for this Jaguar are prohibited. Such modifications in some circumstances could result in a fire. All service actions must be entrusted to a Jaguar Dealer/Authorised Repairer.



WARNING:

Alterations to the electrical system, including the fitting of accessories not designed for this Jaguar, will cause damage to the electrical circuits and systems. In some circumstances this could result in a malfunction or fire. All accessory work should be entrusted to a Jaguar Dealer/Authorised Repairer.



WARNING:

No attempt should be made to repair a fuse that has blown. Always install a new fuse of the correct amperage. Failure to comply with the above may cause a fire hazard or create serious damage elsewhere in the electrical circuit.



WARNING:

Avoid contact with battery acid which is poisonous and corrosive. Acid will cause burns to the skin as well as to the eyes. In the event of skin or eye contamination, wash the affected area with water thoroughly. Seek immediate medical attention when eye contact has occurred.

Health and Safety



WARNING:

Do not disconnect any pipes in the air conditioning refrigeration system. A refrigerant is used which can cause blindness if allowed to contact the eyes. If refrigerant should contact the eyes or skin, wash the eyes or affected area with cold water for several minutes. Do not rub. As soon as possible thereafter, obtain treatment from a doctor or eye specialist.



WARNING:

When working within the engine compartment, take care to avoid contact with moving parts and hot components.
